


Meter reading for MF3300

If in Menu is set to default then please click on counter as below in picture A

Otherwise please press Menu and then click counter.

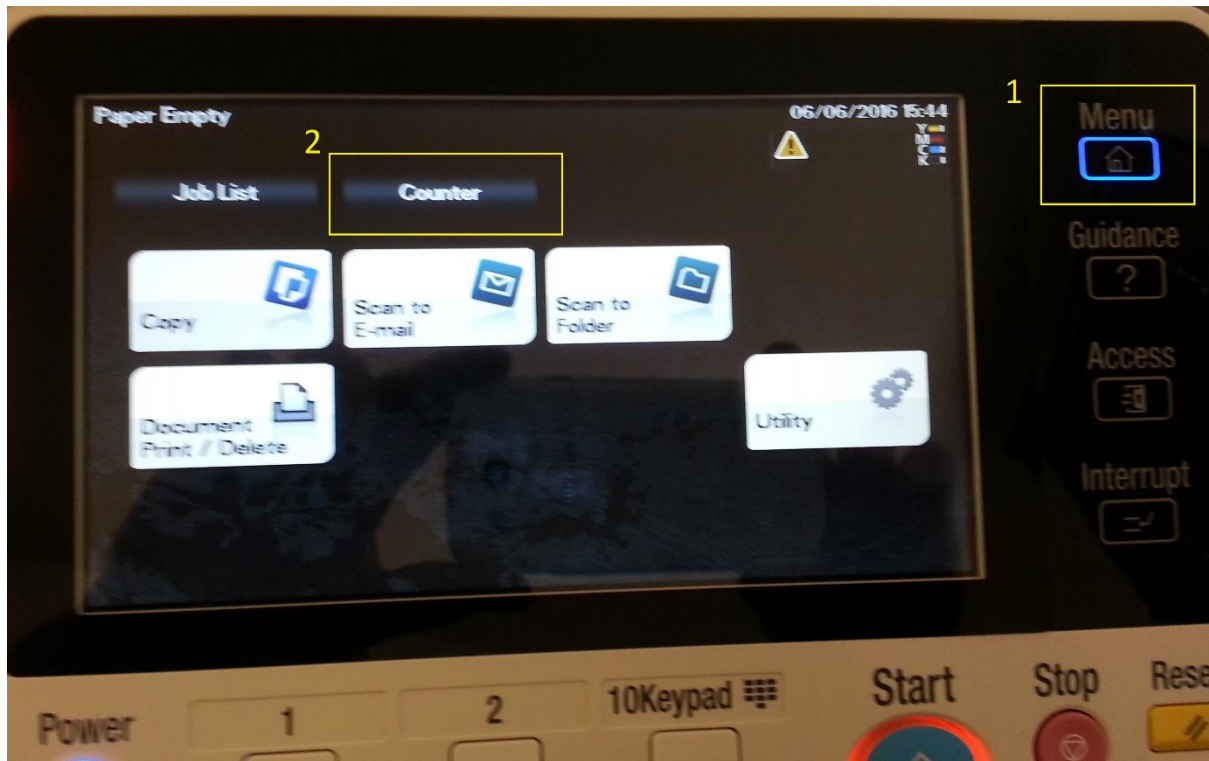

The machines meter readings are on this page

